



HOW TO MEASURE FOR PANORAMAUltra SCREENS

Surface Mount-Interior or Exterior

Canister Width

1. Measure the distance between the jambs at the top, middle, and bottom
2. Add 5" to the shortest measurement to arrive at the canister width

Opening Height

3. Measure the distance from the floor to the underside of the header on both the left and right to get the Opening Height

Between Jambs Under Header

Canister Width

1. Measure the distance between the jambs at the top, middle, and bottom
2. Subtract 1/4" to arrive at the canister width

Opening Height

3. Measure the distance from the floor to the underside of the header on both the left and right to get the Opening Height

Custom Built-In Mount (Used for Combo Systems)

Canister Width

1. Measure the distance between the jambs at the top, middle, and bottom
2. Subtract 1/4" to arrive at the canister width

Opening Height

3. Measure the distance from the floor to the underside of the header on both the left and right to get the Opening Height

Basic Measuring Tips

1. Use a steel measuring tape
2. Measure to the nearest 1/8" of an inch, if the size is on a 1/16th mark, then round down to the next 1/8"