

HOW TO MEASURE FOR PANORAMAULTRA SCREENS


Surface Mount-Interior or Exterior

Canister Width

1. Measure the distance between the jambs at the top, middle, and bottom. Take the largest number.
2. Add 5" to the shortest measurement to arrive at the canister width.

Opening Height

3. Measure the distance from the floor to the underside of the header on both the left and right to get the Opening Height.

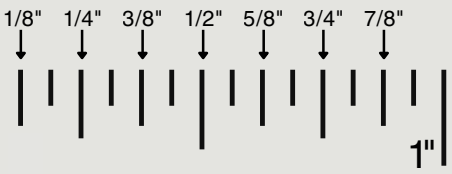

Basic Measuring Tips

1. Use a steel measuring tape
2. Measure to the nearest 1/8" of an inch, if the size is on a 1/16th mark, then round down to the next 1/8"

Between Jambs Under Header

Canister Width

1. Measure the distance between the jambs at the top, middle, and bottom. Take the smallest number.
2. Subtract 1/4" to arrive at the canister width.

Opening Height

3. Measure the distance from the floor to the underside of the header on both the left and right to get the Opening Height.

Custom Built-In Mount (Used for Combo Systems)

Canister Width

1. Measure the distance between the jambs at the top, middle, and bottom. Take the smallest number.
2. Subtract 1/4" to arrive at the canister width.

Opening Height

3. Measure the distance from the floor to the underside of the header on both the left and right to get the Opening Height.

STOETT OUTDOORS

600 Defiance Avenue | Hicksville, OH 43526
(419) 542-0247 | info@stoett.com
stoett.com