


STEP 1: FIND CENTER OF THE NARROWEST DIMENSION OF THE OPENING [$A \div 2 = \text{CENTER OF OPENING (C)}$]

STEP 2: ORDER FORM UNIT DIMENSION HALF (SIZE ON ORDER FORM) [$B \div 2 = (D)$ HALF ORDERED UNIT DIMENSION]

STEP 3: CENTER UNIT ABOVE OPENING

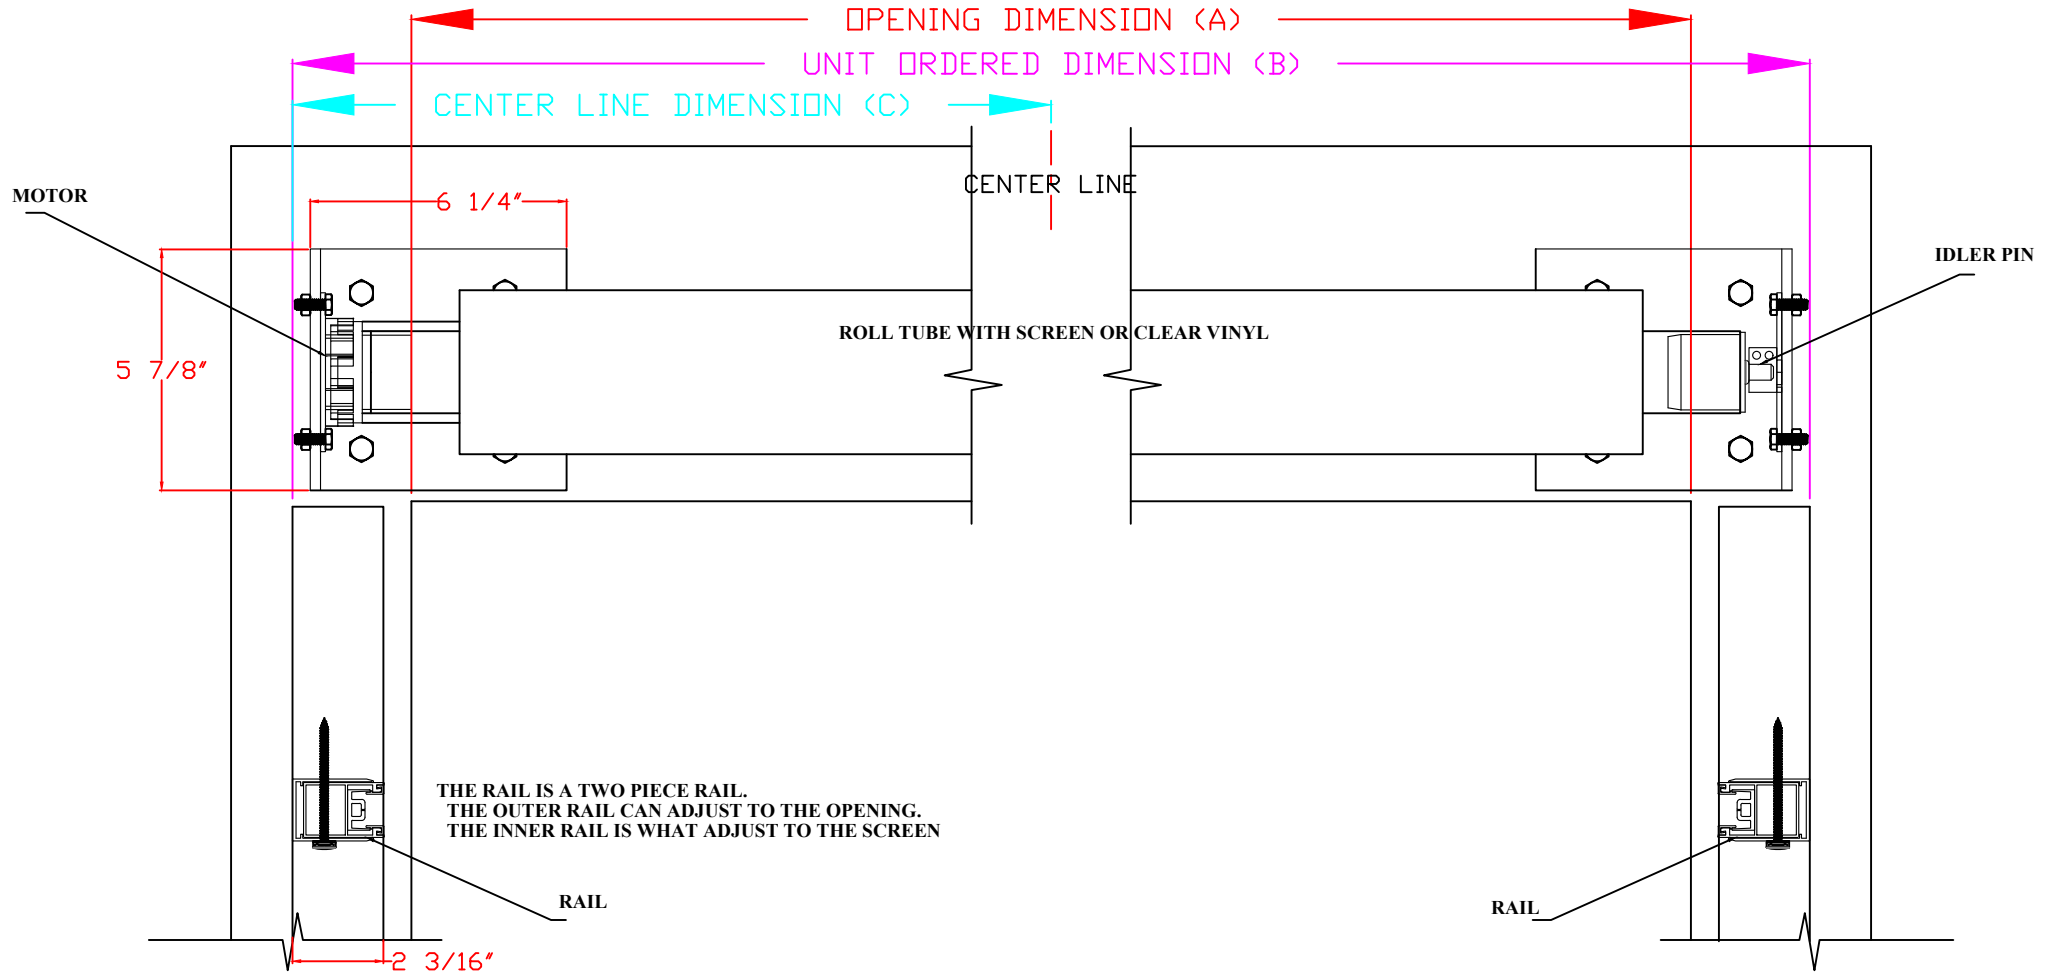

**FRONT ELEVATION SINGLE NO HOUSING BRACKET
ABOVE HEADER INSTALL**